

SHOWER WAND

Key Features:

- Adjustable Shower Wand
 - Twist Clockwise & Counter Clockwise to adjust
- Quick Connect Fitting
 - Remove and connect with ease
- In-line Soap Can Setup
 - Adjustable Soap Can
- Push On/Off
 - Easy Push On/Off wand

How to Use:

- Connect Spray Wand to feed hose.
 - Wand and feed hose store in top pouch
- Power on washer and push button to start shower
- Turn button to adjust wand control
 - full water to minimum water flow
- In-line Soap Can option
 - Connect via Soap Can instructions*
- Drain and store back in pouch
 - Power off washer, disconnect from hose
 - Put button to On position to drain water until empty

Care and Maintenance:

- Clean wand
 - Unscrew shower wand face and clean wand fine screen
 - Replace after clean debris

Safety Precautions:

- High Pressure - DO NOT point into face or eyes directly
- Push button to On position release pressure before disconnecting

Warranty Information

- See Product Warranty
- Email help@cmproductssd.com or visit www.cmproductssd.com for more support



Motorwasher EZ-WASHER

CM Products LLC, 928 W Flurie Road, Dakota Dunes, South Dakota 57049-5050

Phone: (712) 250-6006

Email: info@cmproductssd.com

www.cmproductssd.com