

SPRAY NOZZLE

Key Features:

- Adjustable Spray Nozzle
 - Twist Clockwise & Counter Clockwise to adjust
- Quick Connect Fitting
 - Remove and connect with ease
- In-line Soap Can Setup
 - Adjustable Soap Can
- Trigger Lock
 - Easy trigger lock

How to Use:

- Connect Spray Nozzle to feed hose.
 - Nozzle and feed hose store in top pouch
- Power on washer and squeeze trigger to start spray
- Twist nozzle to adjust spray control
 - full power stream to fine mist
- In-line Soap Can option
 - Connect via Soap Can instructions*
- Drain and store back in pouch
 - Power off washer, disconnect from hose
 - Squeeze trigger to drain water until empty

Care and Maintenance:

- Clean nozzle
 - Unscrew nozzle tip and clean spray venturi
 - Replace after clean debris

Safety Precautions:

- High Pressure - DO NOT point into face or eyes directly
- Squeeze trigger to release pressure before disconnecting

Warranty Information

- See Product Warranty
- Email help@cmproductssd.com or visit www.cmproductssd.com for more support



Motorwasher EZ-WASHER

CM Products LLC, 928 W Flurie Road, Dakota Dunes, South Dakota 57049-5050

Phone: (712) 250-6006

Email: info@cmproductssd.com

www.cmproductssd.com